

Installation Instructions

安裝說明書

FRONT STRUT BRACE

引擎室拉桿


#8805

Application 適用車型

Honda CR-V '07-11
Honda CR-V '12-16

Components 內含配件

- ① Brace 結構桿
Cross bar 中間桿.....1pcs
Bracket-RH 支架-右.....1pcs
Bracket-LH 支架-左.....1pcs
- ② Bolt 螺絲 (M10x1.5x80).....2pcs
- ③ Nut 螺帽 (M10x1.5-17x10).....2pcs
- ④ Washer 華司 (20.8x10.7x2).....4pcs
- ⑤ Washer 華司 (28x12.2x5).....2pcs

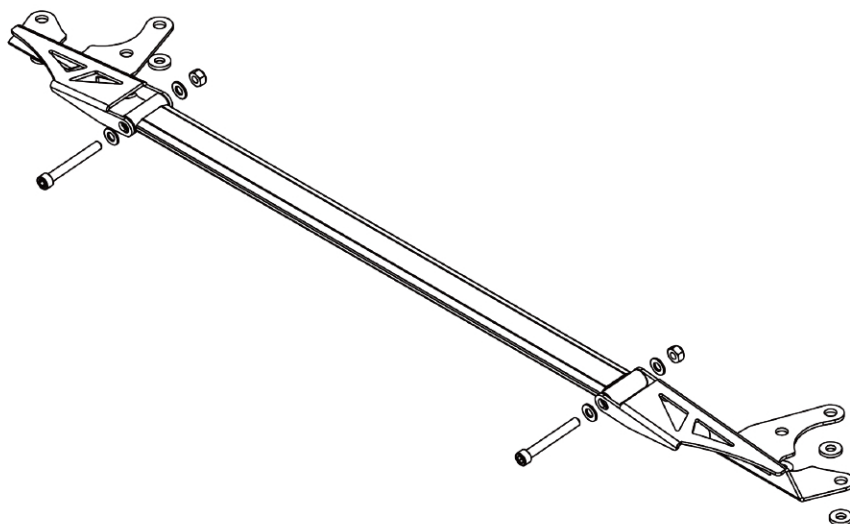

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle.
安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual.
安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned.
安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

Instructions 安裝說明

1. Remove wiper arms, cowl panel and inner bracket to access strut towers.
卸下雨刷臂、雨刷蓋板及內側鉸金支架後可找到避震器上座。
2. Remove the nuts of strut towers on both sides.
拆卸兩側避震塔上的螺帽。
3. Place supplied brackets of the brace over the studs on strut towers, then reinstall the nuts to secure the brackets. (See figure 2)
將配件 桿身支架 安裝至避震塔螺絲上，並鎖回螺帽以將支架固定。(參考圖二)
4. Place supplied M12 washers to the outer-most studs on strut towers. (See arrow in figure 2)
安裝配件M12華司至避震塔最外側的螺絲上。(參考圖二箭頭)
5. Install cross bar to the brackets on both sides using supplied bolts, nuts and M10 washers.
使用配件螺絲、螺帽及M10華司，將中間桿安裝於兩側支架上。
6. Reinstall inner bracket, cowl panel and wiper arms.
將鉸金支架、雨刷蓋板及雨刷臂裝回車上。



Illustration of installed state
安裝完成示意圖

