

# Installation Instructions

## 安裝說明書

REAR DAMPER LIFT KIT  
後避震器上移套件  
#Q0691

### Application 適用車型

Toyota Alphard '15-present  
Toyota Vellfire '15-present

### Components 內含配件

① Relocation bracket 上移固定座 .....2pcs

### Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle.  
安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual.  
安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned.  
安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

### Instructions 安裝說明

1. Remove the factory shock absorber upper mounting brackets.  
將原廠的減震筒上鎖點固定座拆下。
2. Install the new relocation mounting brackets to vehicle using original hardware.  
沿用原廠的螺絲及螺帽安裝上移固定座。
3. Reinstall the shock absorbers.  
將減震筒安裝至新的固定座。

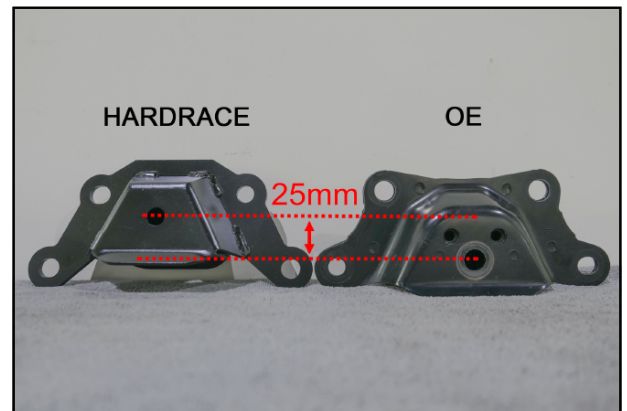
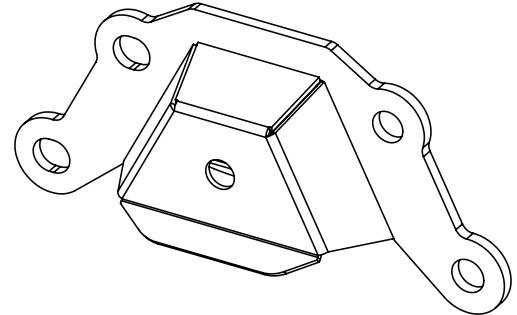


Illustration of installed state  
安裝完成示意圖